Monteringsvejledning

– *Redskabsskur – Model Thor*

Pos	Size, mm			Detail stock	Details	Annotation
	Length	Width	Table			
1	3000	110	28	34		Wall A C
2	3000	55	28	1		Wall A
3	3000	55	28	1		Wall A
4	3000	110	28	1		Wall C
5	1760	110	28	8		Wall D
6	1760	110	28	1		Wall D
7	1760	110	28	8		Wall B
8	1760	55	28	1		Wall B
9	1760	55	28	1		Wall B
10	525	110	28	9		Wall D
11	525	110	28	9		Wall B
12	525	110	28	18		Wall B D
13	232	110	28	17		Wall E
14	232	55	28	1		Wall E
15	232	55	28	1		Wall E
16	232	110	28	17		Wall E
17	232	110	28	1		Wall E
18	1450	110	28	1		Wall E
19	3000	110	34	4		Boards on top
20	1740	110	34	1		Boards on top
21	3215	105	20	4		Cover boards
22	3215	60	16	2		Roof plank
23	3259	60	16	2		Roof plank
24	120			1		Support roll
25	2240	130	40	3+1		Rafters
26	1603	130	40	4		Rafters
27	2775			7.21 m²		Floor board
28	3250	115	20	40		Roof boards
29	2784	35	25	5		Floor borders
30	2840	40	55	1		Foundation
31	2750	40	55	5		Foundation
32	1754	40	55	1		Foundation
33	1600	40	55	1		Foundation
34	1550	40	55	1		Foundation
35	2330	40	55	1		Foundation
36	1880	40	55	1		Foundation
37	1870	1440	28	1		Door
38	970	700	28	2		Window

Screws			Nails		
	3.5x5	For windows and doors		2.5x6	For boards
	3.5x3	For roof decorative parts			

1. Floor bearers

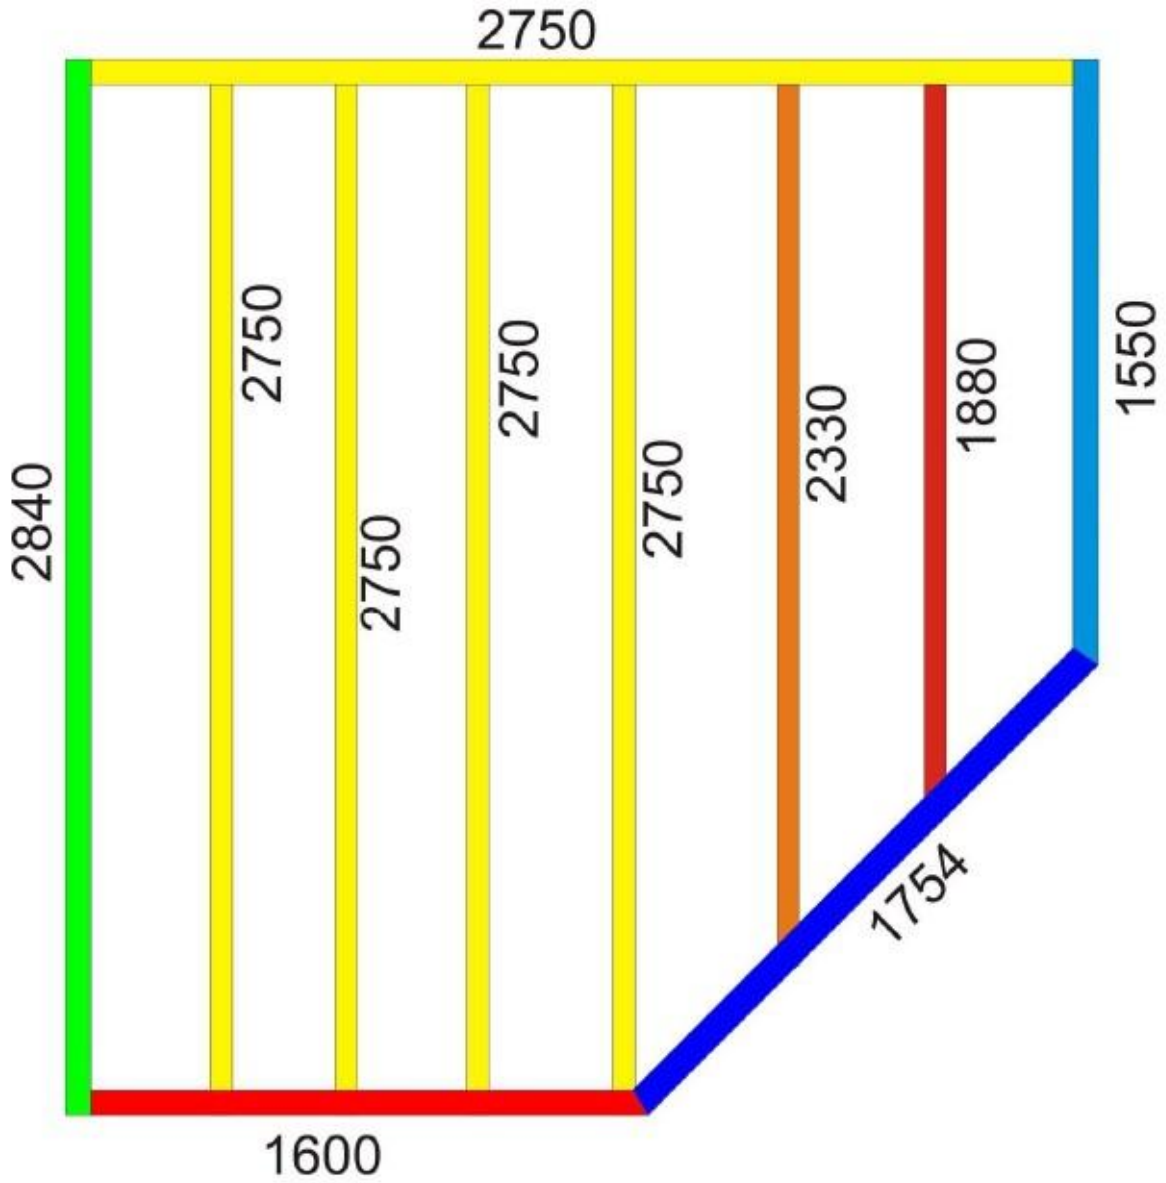

2. The plan

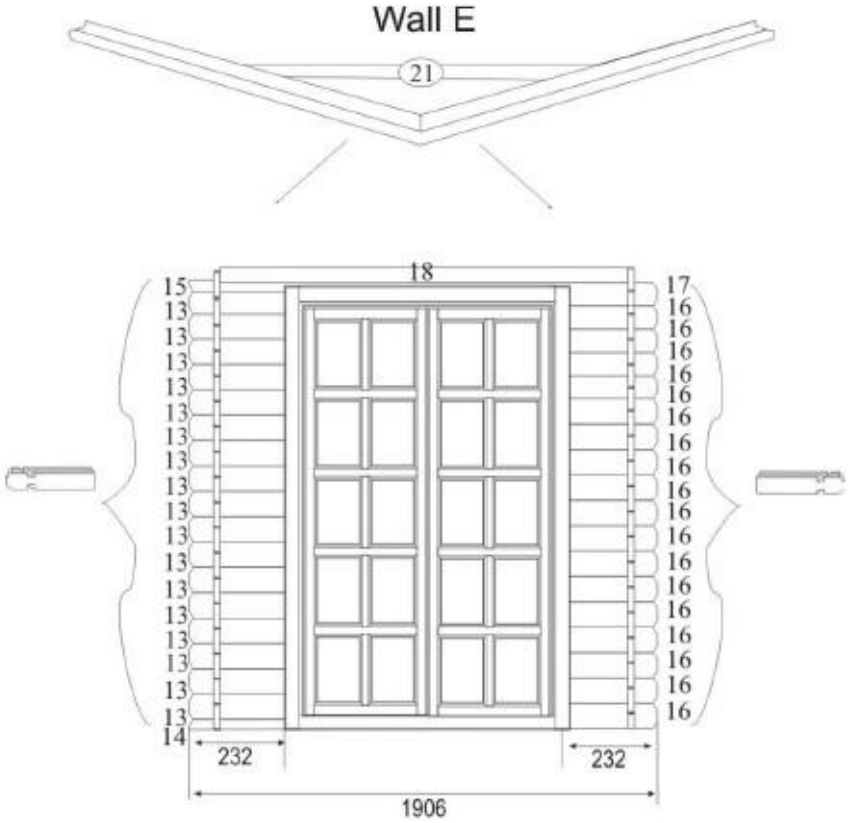
Wall E
21
18
15
13
14
17
16
232
232
1906

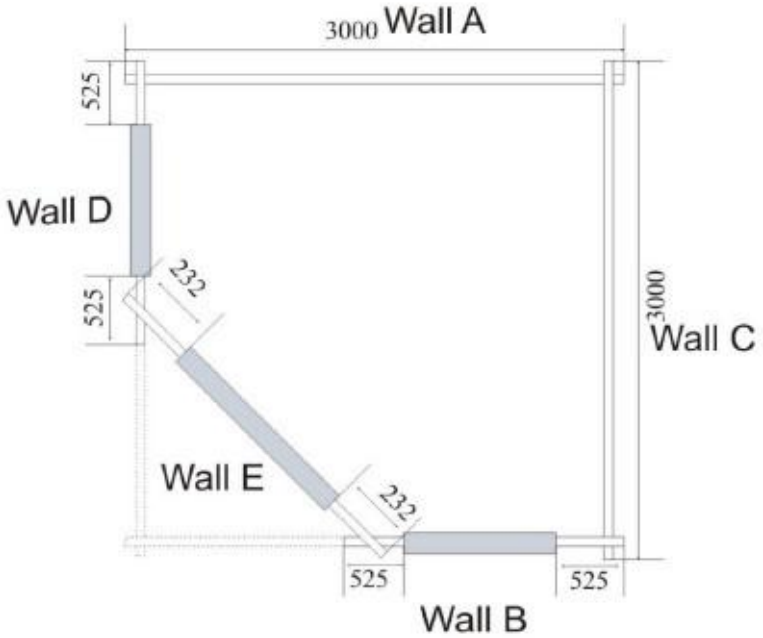
3000 Wall A
525
Wall D
232
525
3000
Wall C
Wall E
232
525
525
Wall B

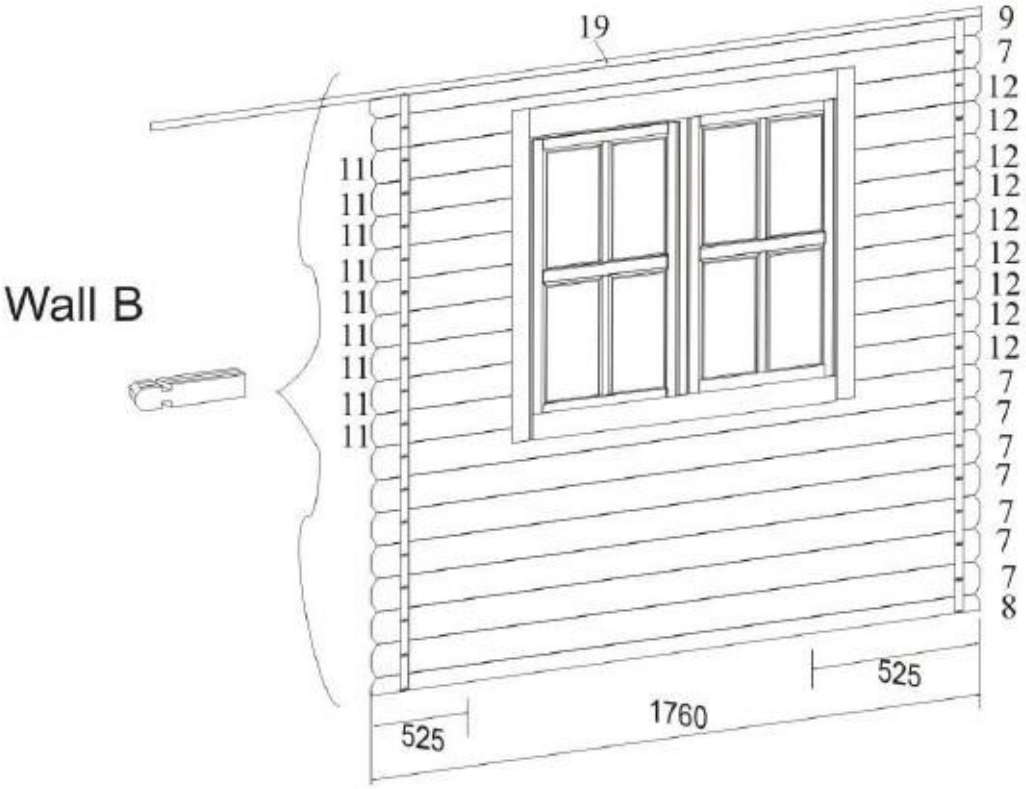
Wall B
19
9
7
12
12
12
12
12
12
12
12
12
7
7
7
7
7
7
7
8
11
11
11
11
11
11
11
11
11
525
1760
525

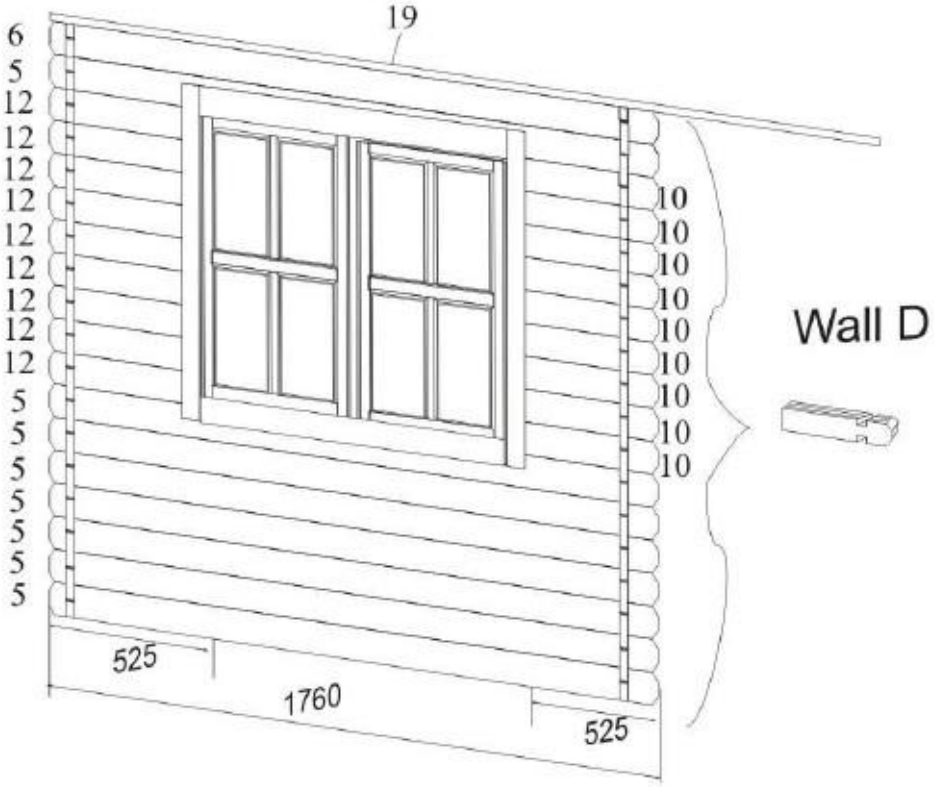
Wall D
19
6
5
12
12
12
12
12
12
12
12
12
12
5
5
5
5
5
5
5
10
10
10
10
10
10
10
10
10
525
1760
525

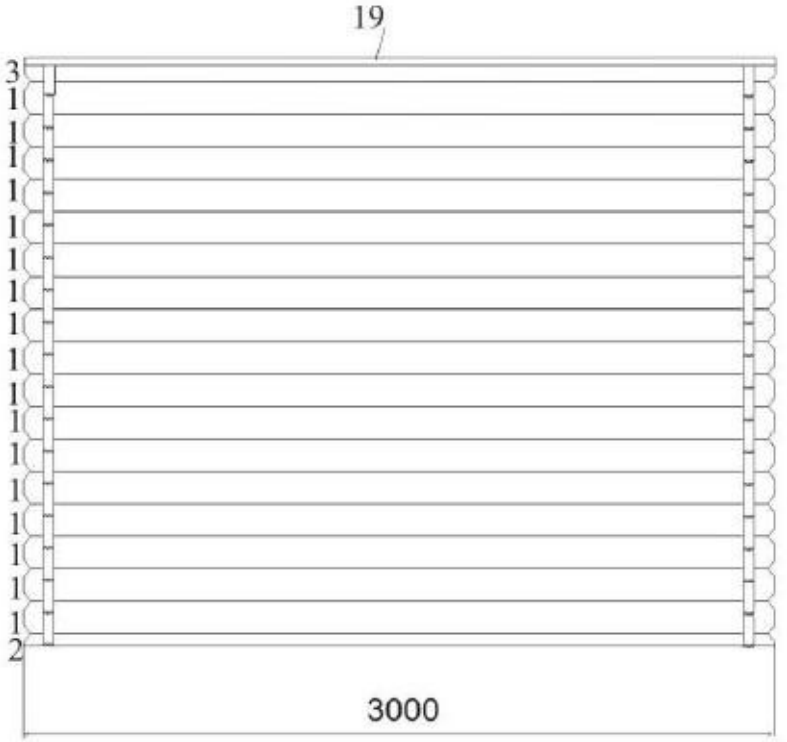

Wall A

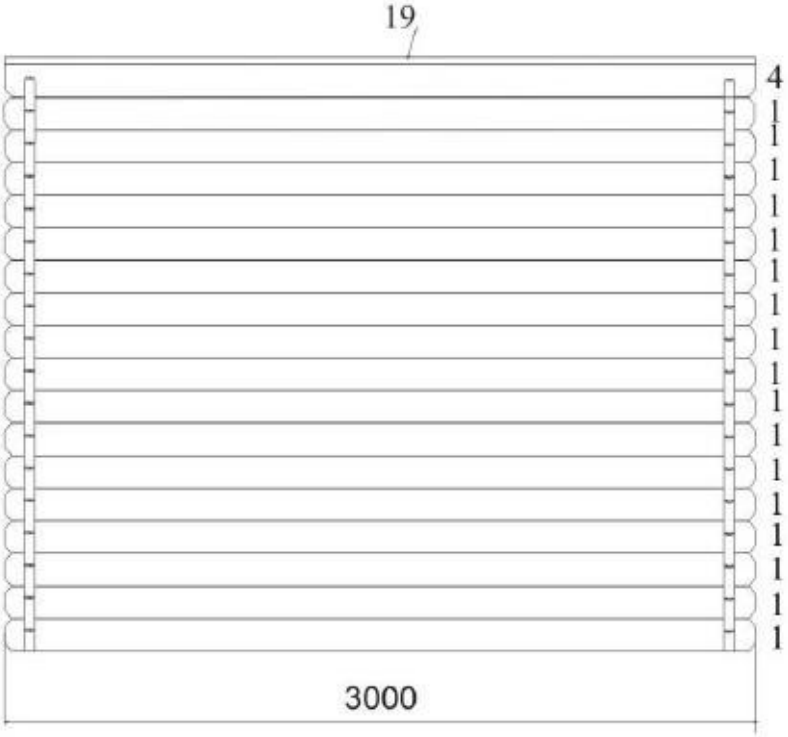

Wall C

3. The Roof:

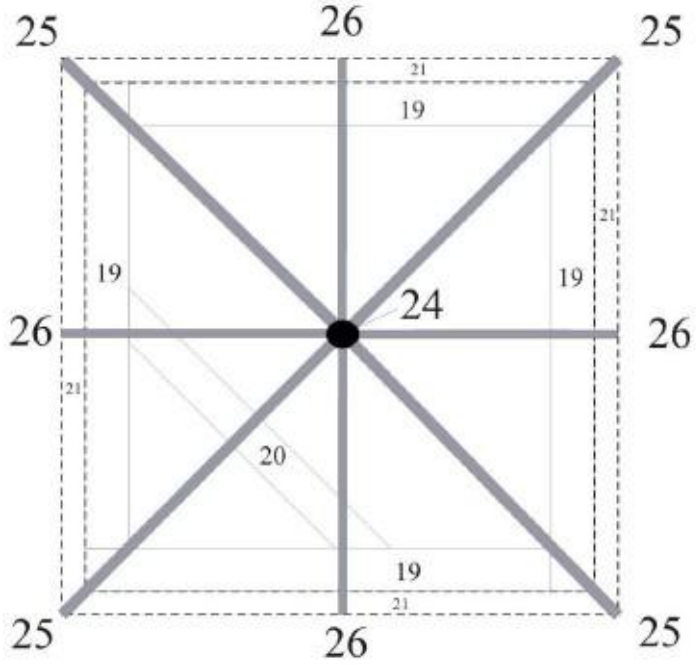
25
26
25
21
19
21
19
19
24
26
26
21
20
19
21
25
26
25

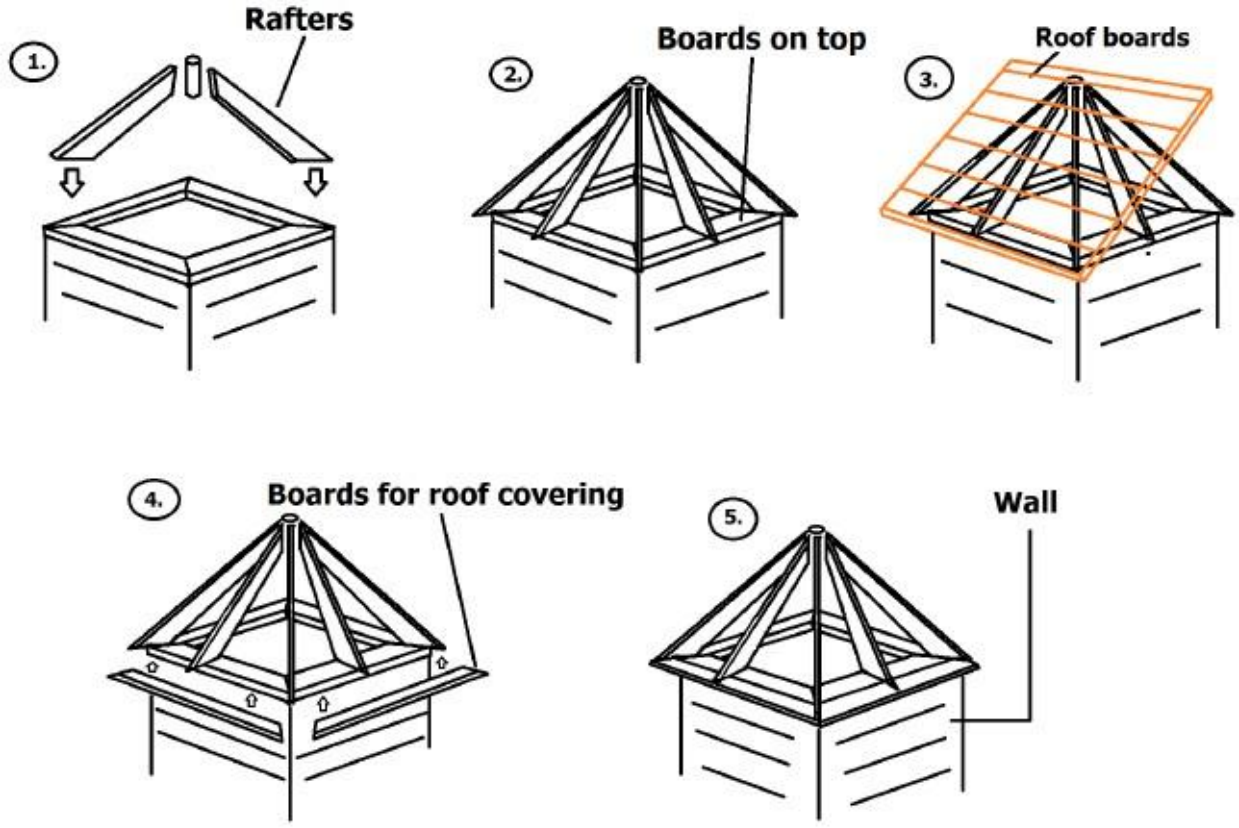
1.
Rafters
2.
Boards on top
3.
Roof boards
4.
Boards for roof covering
5.
Wall

4. Door.

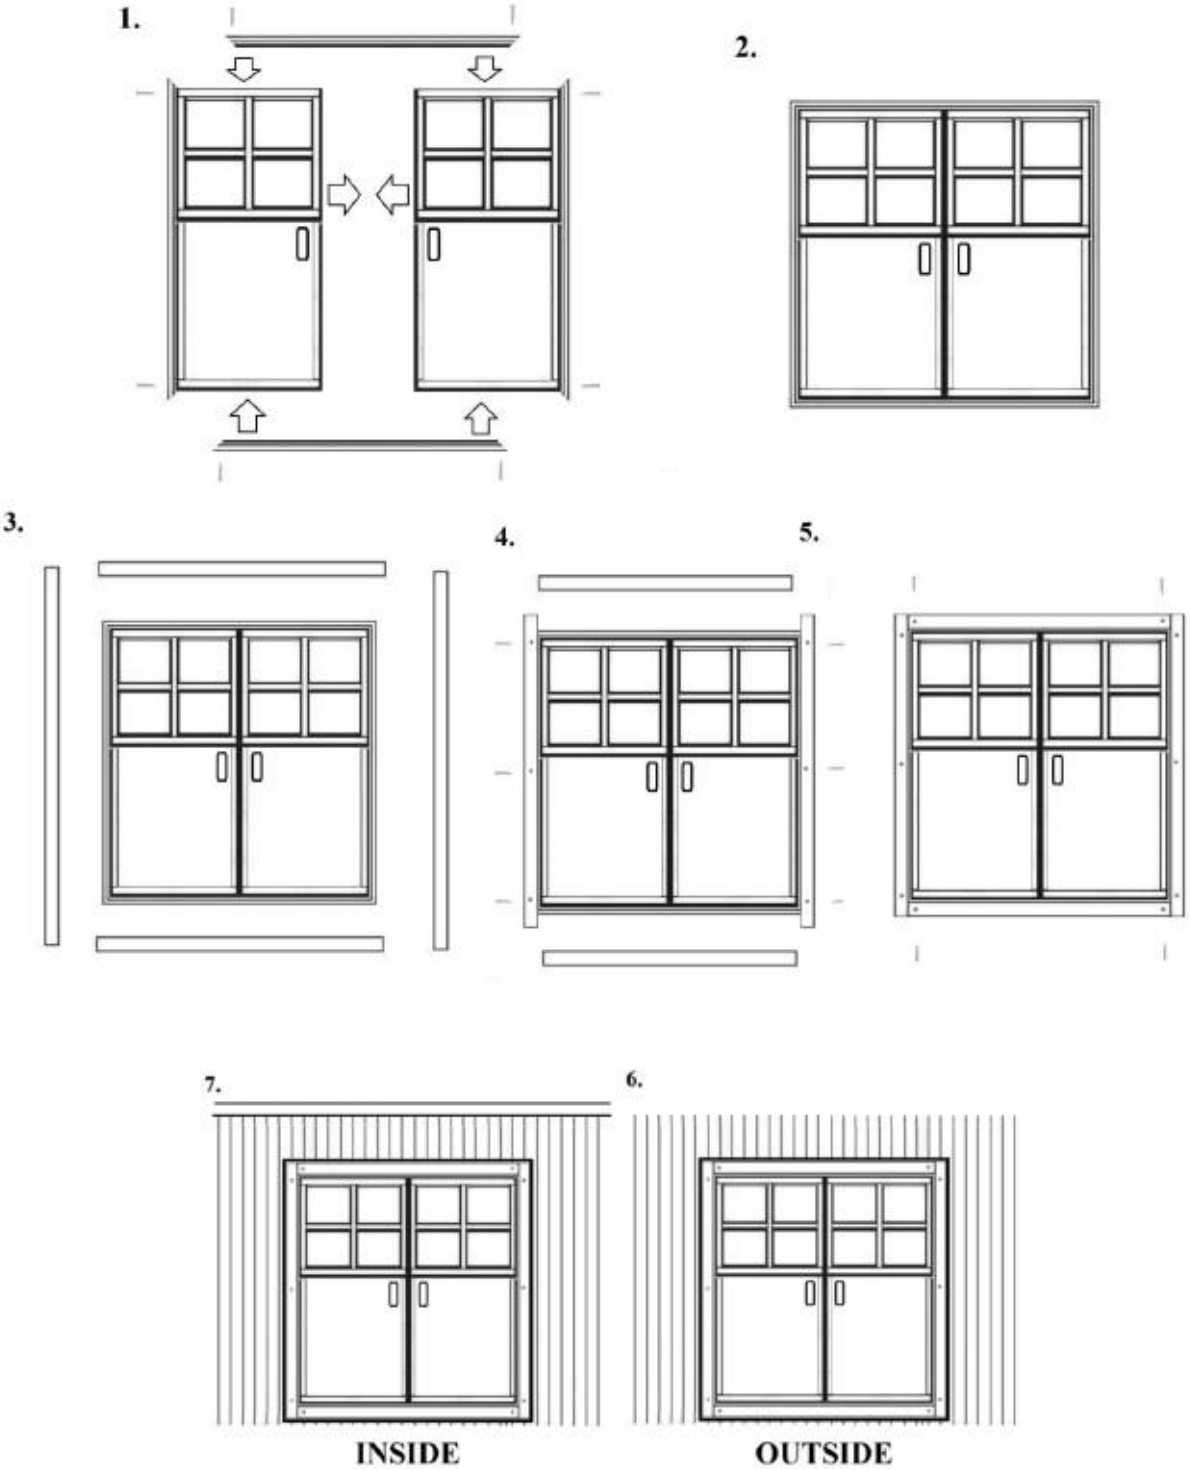

5. Windows.

1.

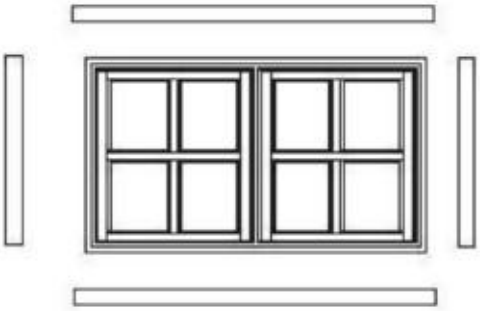

Place the window frame and four support trims on the stable surface.

2.

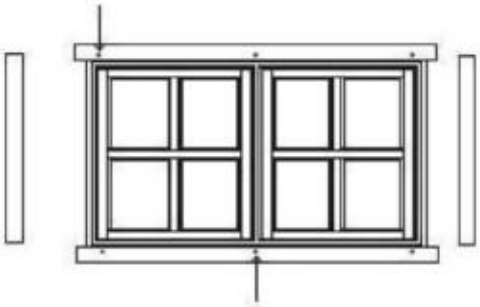

Drill the holes in the support trims and screw them in to the window frame.

3.

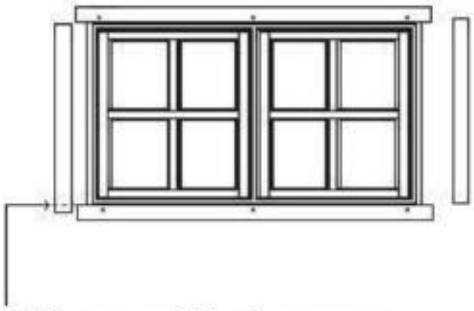

Cut the support trims if necessary

4.

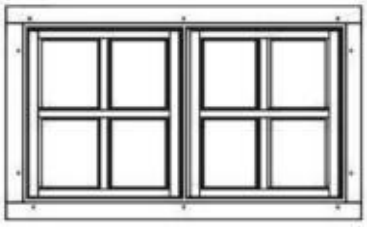

All four support trims are fixed

5.

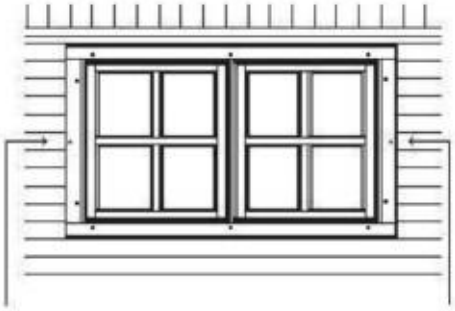

Just insert the window frame in to the space (no screwing)

6.

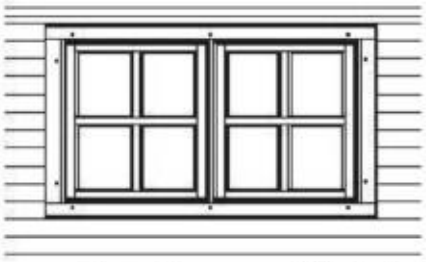

Now screw the rest four support trims in to the window frame from the other side.

6. Flooring.

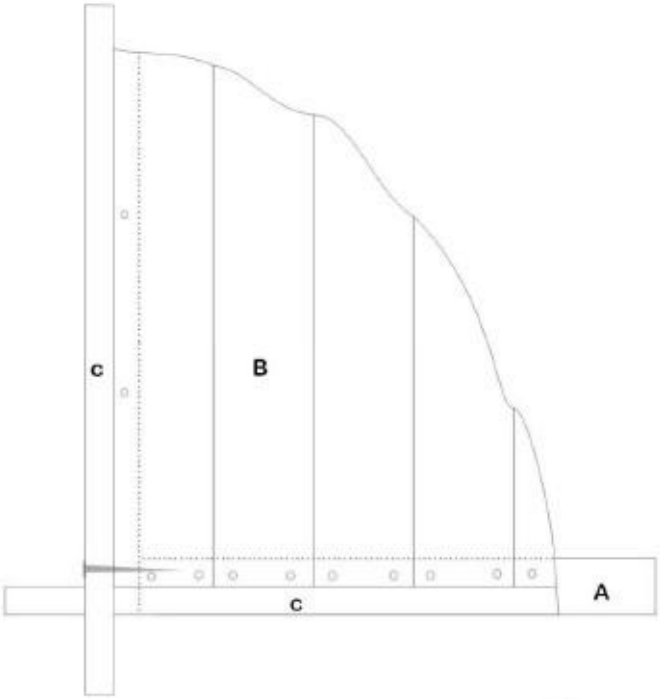

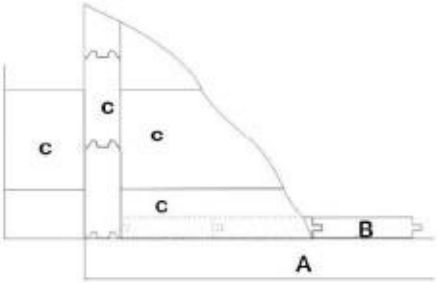

A, - Bearers
B, - Floor-boards
C, - Wall-boards

Floor Boards

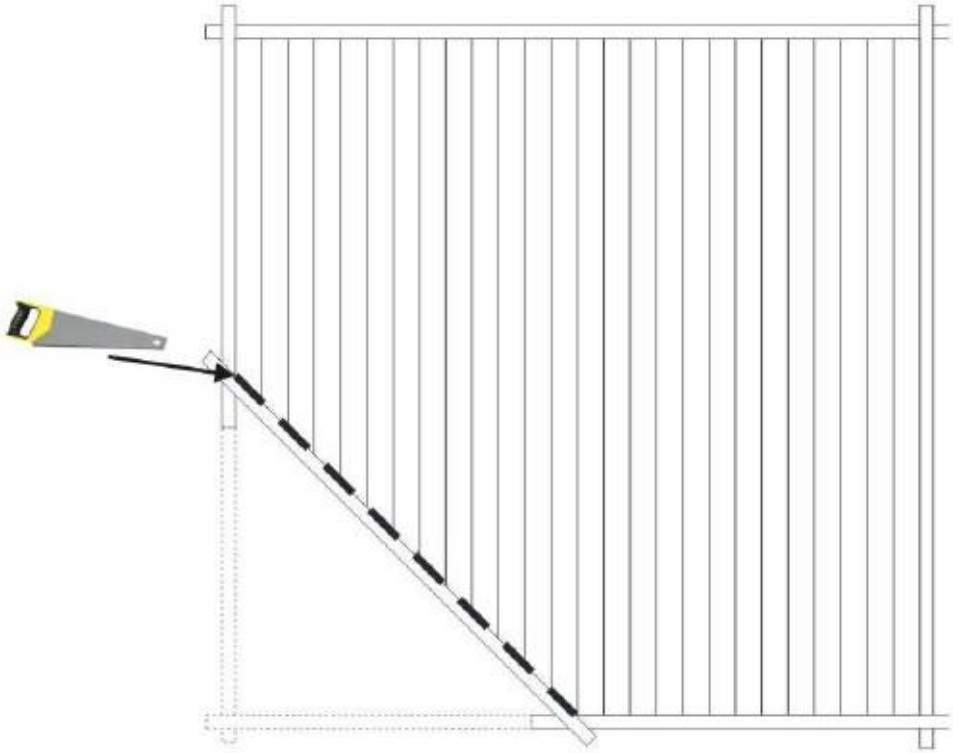
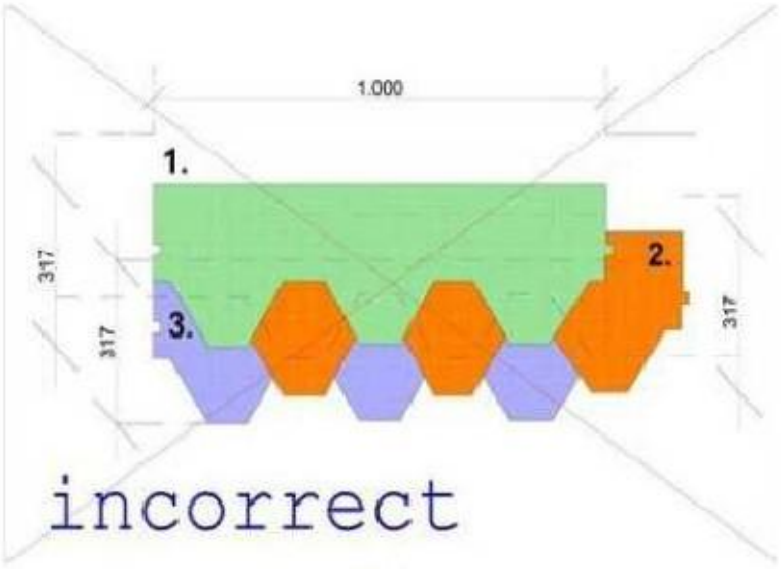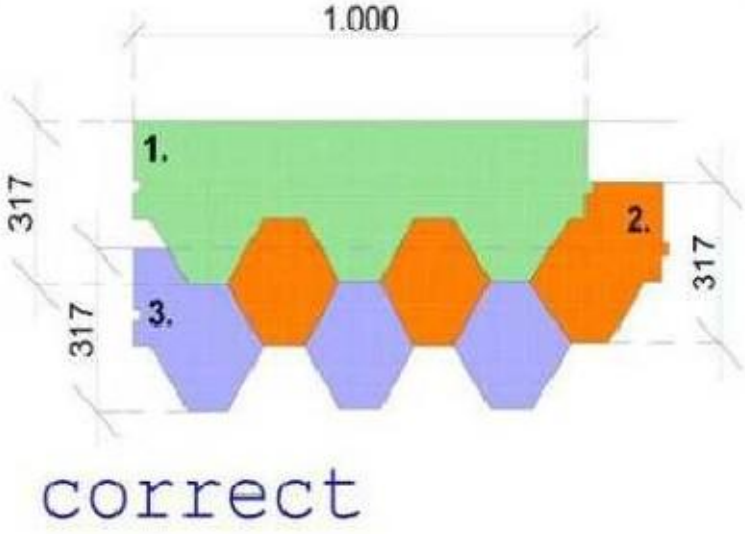
7. Felt roof shingles.